

User Health & Safety Instructions for SG101, 102, 104, 105, 109, 110

IBC Bunds & Spill Pallets will give many years of service by following our guidelines:

Siting the IBC Bund

The IBC Bund should be sited and fully supported on a flat uniform level surface of a sufficiently strong and stable nature, and should be clean of stones and any other objects. A bed of soft sand cement mix can be used if the site is uneven.

Loading the IBC Spill Containment Bundstand

Forklift users should be instructed to lower the IBC unit as carefully and as level as possible on the Bund.

The IBC unit must sit on the recessed pads, avoid lowering onto elevated surfaces. The forks should be withdrawn free of snagging the IBC Bund rim or any part of the IBC unit.

Forklift users should be made aware that the single IBC Bund is not square and the IBC unit should be loaded correctly. The IBC unit nozzle should face toward the narrowest side. IBC Bunds with a drain off bucket facility cannot be loaded from the bucket side.

The IBC unit should not be loaded onto the Bund while the Bund is on a wooden pallet.

Spillages

In the event of a spill and in harmony with good housekeeping, cleanups should occur immediately and any residual liquid neutralised. However, data sheets should be consulted and the health and safety officer or responsible person should supervise all cleanups. Waste should be disposed of in accord with the manufacturer's direction.

The units are designed/supplied for secondary containment of spillage, and not for primary containment unless otherwise agreed in writing.

Use

The IBC Bund is designed to cope with a variety of environments and is suitable for 95% of all liquids to be stored. Please refer to our chemical resistance chart showing the range of liquids that can be safely banded: <http://www.suigeneris.co.uk/pdfs/Spill-Containment-Chemical-Resistance-Charts.pdf>

When drawing from the IBC unit directly into a container, sensible practices should be followed such as not overfilling the container, not leaving the container whilst being filled, the wearing of appropriate gloves, etc. The filled container should not be removed from the IBC Bund without first making sure the IBC valve is turned off and not leaking fluid.

Storage

Thoroughly clean and store on a flat surface.

Moving the IBC Spill Containment Bund

The Bund (without IBC) can be lifted quite comfortably by two healthy personnel. However, it is recommended that when moving the location of the Bund it is manhandled onto a pallet and moved by forklift. If relocating please refer to 'Siting the IBC Bund'.

When manhandling the Bund sensible lifting practices should be employed:

- Do not:-
- a) Drag the IBC Bund
 - b) Forklift without a pallet (unless the Bund has added forklift facility)

Under no circumstances should any Bund be moved while accommodating an IBC unit.



For prices or to order visit: www.suigeneris.co.uk
or call **01206 798 798** to speak to our specialist team.

Industrial Linings
Industrial Coatings
Spill Containment

GRP Mouldings
Anti-slip Stair & Floor
Industrial Grating