

Caring for your Landscape and Garden Furniture

Essentially our Landscape and Garden Furniture products are maintenance free, however, following our guidelines will ensure maximum life expectancy.

General Cleaning

As with many outdoor products, contamination from substances such as bird droppings and tree sap are potentially harmful and should be removed as soon as possible. The smooth finish of fibreglass furniture allows for the easy removal of such substances as well as everyday dirt and grime in three steps.

- **Step One:** Initially spray down the furniture with a water hose to loosen any contamination.
- **Step Two:** Wipe the furniture over with a soft sponge or cloth that has been immersed in warm water. For more stubborn stains add a mild detergent (no stronger than dishwashing detergent) avoiding high acidity or alkalinity.
- **Step Three:** Rinse well with clean water ensuring that no detergent is left behind.

UV Protection

UV exposure may result in the furniture's colour suffering from a slight dulling over time. Prior to delivery the furniture has already been treated with a specialist wax solution to protect against this, however, further applications of this wax solution are necessary on a quarterly basis to help ensure continued protection.

This wax solution should be purchased direct from Sui Generis and applied as per the supplied instructions.

Unsuitable Cleaning Materials

Avoid the use of the following on the furniture:

- Wire brushes or other harsh or abrasive materials.
- Strong alkaline cleaners or solvents such as acetone and lacquer thinners.

General Precautions

Fibreglass is extremely robust, however; the following precautions should be taken to protect the furniture;

- Avoid impact damage or dropping heavy or sharp objects onto the furniture.
- Do not drag sharp objects along the surfaces of the furniture.
- Remove any contamination from the furniture as soon as possible.
- Do not overcoat the furniture with any other product.