

Spill Containment

Bunded Drum Trolley - Product Information Sheet

Loading the Drumbund

For safety reasons we recommend that you carry out your own manual handling assessment before using the Bunded Drum Trolley.

Stand drumbund upright and support on safety stops. Tilt and pivot drum onto the bund or tilt the drum and slide the bund under. Ensure drum is tight to bund before tightening the strap.

Flip safety stops over. Place foot on axle and using body weight pull the drumbund towards you with one hand on each of the handles.

The operation should be one smooth movement from vertical to horizontal. Flip the stops over.



Note: Ensure the drum is loaded with the taphole in the appropriate position. Avoid moving the drumbund when loaded if possible.

Moving the Drumbund

For safety reasons it is recommended that the drumbund not be moved when loaded. However, if movement is necessary the drumbund should be pushed by the handle with minimum lift. Ensure the safety stops are down and avoid pulling the drumbund as this can render the safety stops inoperative.

Changing the Bund

Remove the strap. Lift the bund from the handle end until it is clear of the frame. Ease out of retaining bar and lift clear. To load reverse the procedure.

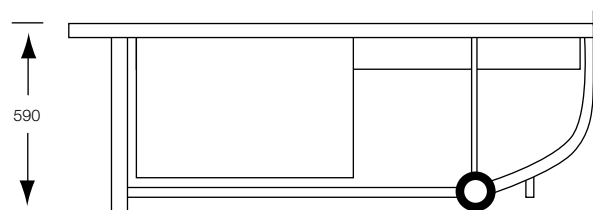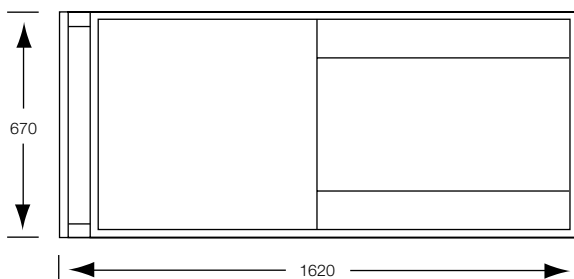

Sui Generis International Ltd.

The Chandler's Centre
Hythe Quay
Colchester
CO2 8JB

Tel: 01206 798 798
Fax: 01206 866 666
Email: info@sui generis.co.uk
www.sui generis.co.uk